



Treatment continued

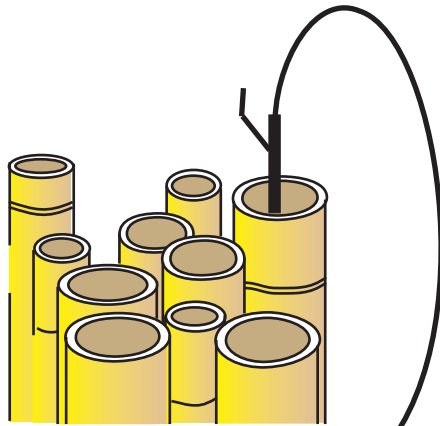

STEP 10
 Connect a hose to the container which holds the mixture. Pump the solution into the culms.

STEP 11
 Fill the entire bamboo with the solution. Every morning refill the culms with more of the solution. The culms will have absorbed approximately 1% of the liquid overnight. Every day absorption rate is less.

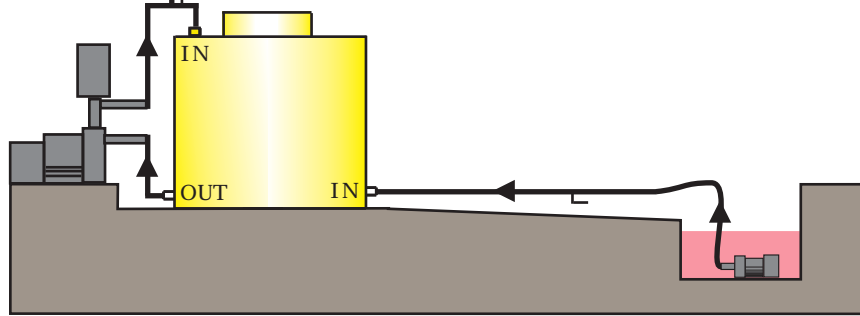

STEP 12

On Day 13 don't add more solution. Allow the level to go down to avoid overflow when the last node is broken.

STEP 13

On Day 14 break the last node using a metal punch. Make sure you wear face protection. The diaphragms of large culms should be punctured by using the iron rod. The solution will now flow on the sloped basin floor into the sump hole.

Calendar

Sun	Mon	Tue	Wed	Thu	Fri	Sat	Jan	Feb
	1	2	3	4	5	6	Mar	Apr
7	8	9	10	11	12	13	May	Jun
14	15	16	17				Jul	Aug
							Sep	Oct
							Nov	Dec

